

Quick Start Guide

FreeStyle & GT

41, 31, 21 LED

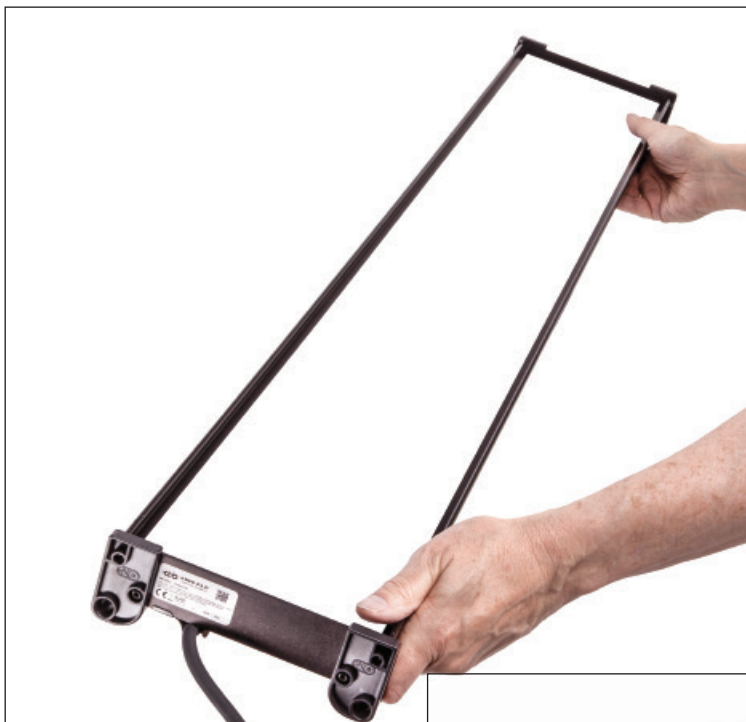

KINO FLO
Lighting Systems

FreeStyle Systems



SYS-F41U FreeStyle 41 LED DMX System,
Univ

SYS-F41TU FreeStyle/GT 41 LED DMX System,
Univ



SYS-F31U FreeStyle 31 LED DMX System,
Univ

SYS-F31TU FreeStyle/GT 31 LED DMX System,
Univ



SYS-F21U FreeStyle 21 LED DMX System,
Univ

SYS-F21TU FreeStyle/GT 21 LED DMX System,
Univ

Each FreeStyle LED System consists of:

- 1 FreeStyle LED Fixture or 1 x FreeStyle/GT LED Fixture
- 1 Mounting Plate
- 1 Extension Cable
- 1 LED Controller

FreeStyle System Components



- CFX-F41** FreeStyle 41 LED Fixture
- CFX-F31** FreeStyle 31 LED Fixture
- CFX-F21** FreeStyle 21 LED Fixture



- CFX-F41T** FreeStyle/GT 41 LED Fixture
- CFX-F31T** FreeStyle/GT 31 LED Fixture
- CFX-F21T** FreeStyle/GT 21 LED Fixture



- MTP-BG41** KinoGrip 41K Mount w/
Baby Receiver (16mm)




- X12-25** FreeStyle Extension, 25ft



- LED-151X-120U**
FreeStyle 151 LED DMX Controller, Univ 120U

- LED-151X-230U**
FreeStyle 151 LED DMX Controller, Univ 230U

Included w/ all FreeStyle & GT Fixtures

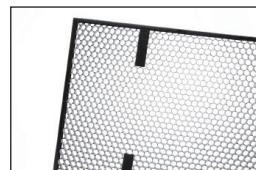

- LVR-SL290-P** FreeStyle 21 Louver/HP, 90°
- LVR-SL390-P** FreeStyle 31 Louver/HP, 90°
- LVR-SL490-P** FreeStyle 41 Louver/HP, 90°

Power



AC Input

The FreeStyle 151 LED DMX Controller is powered AC and includes an IEC connection. It also includes a 12ft power cord with a locking IEC connector.

The FreeStyle 151 LED DMX has a built-in power supply with universal input from 100-240VAC.



Ambient Operating Temperature

The FreeStyle 151 LED DMX is designed to operate at temperatures from 14°F to 104°F (-10°C to 40°C).

DC Input

The FreeStyle 151 LED DMX can also be operated on 24VDC (input range 18-36VDC) through a 3-Pin XLR. The pin polarity is:

- Pin # 1 – Ground
- Pin # 2 + 18-36VDC
- Pin # 3 not used



Note:

A low voltage warning will display if input DC voltage is under 18VDC. Photo example: **LOW VDC: 16**

FreeStyle Fixture Assembly




The FreeStyle LED Fixture is comprised of a removable Fixture Shell, LED panel and Louver. The Louver is held in place with Velcro fasteners.



The FreeStyle/GT includes Gaffer Tray in place of Plastic Shell.



To remove the LED panel from the fixture housing, press the locking pin and turn thumbscrew to release LED panel.

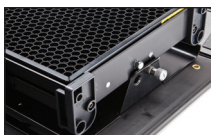


Lift LED panel from metal tray.



Slide LED panel from fixed pins.

To replace, reverse the procedure.

Removable Mount

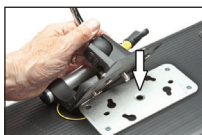

Align the center pin of the mounting plate to the center hole on the mating plate.




Rotate plate clockwise until the four shoulder rivets drop into the receptacle. A locking pin will snap into place when the plate is properly seated.

The **yellow wire loop** provides an attachment point for a safety chain.



To remove the plate, pull up on the locking pin and reverse the mounting procedure.

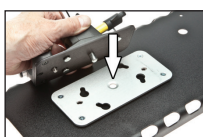

The FreeStyle/GT Gaffer Tray & LED panel also have a mating plate to accept the twist-on mount plate.

Control Panel - White Mode



- A) On /Off:** **On** = Green light displayed. **Off** = Red light displayed. The display and all menu settings can be operated while the power button is in the Off position, as long as power is applied to the controller. The On /Off button only controls the light source.
- B) Menu:** Provides access to menu options such as General settings, Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).
- C) Preset Buttons:** Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin and G/M settings.
- D) Display:** Provides access to Dim, Kelvin, G/M, and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.
- E) Lock:** Press the **Lock** button to disable all buttons and Control knob. Press for 3 seconds to restore displayed presets to default factory settings.
- F) Mode:** Press to navigate from Dim to Kelvin and G/M settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.
- G) Data Port:** Mini B USB for firmware updates.
- H) Control Knob:** Manually adjusts Dim, Kelvin, G/M levels and DMX address. Press the Control knob to toggle between **Fine** and **Coarse** increments or when selecting options within menus.

DMX Note: Each LED Fixture has an **"AUTO TERMINATE"** feature. The last fixture that does not have an XLR cable attached to the DMX "Out" port will automatically terminate.

Control Panel - Gels/Hue Mode



Gels/Hue Mode

A) Menu:

Provides access to menu options such as General settings (**Gels/Hue Mode**), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, Gel, Hue and Saturation settings.


C) Display:

Provides access to Dim, Kelvin, G/M, Gel, Hue/Saturation and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

D) Mode:

Press to navigate from Dim to Kelvin, G/M, Gel, Hue and Saturation settings. When on the Gel function, pushing the Control knob in/out will apply the gel or remove the gel. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut Tip: Long press will bring you back one step.

Control Panel - RGB Mode

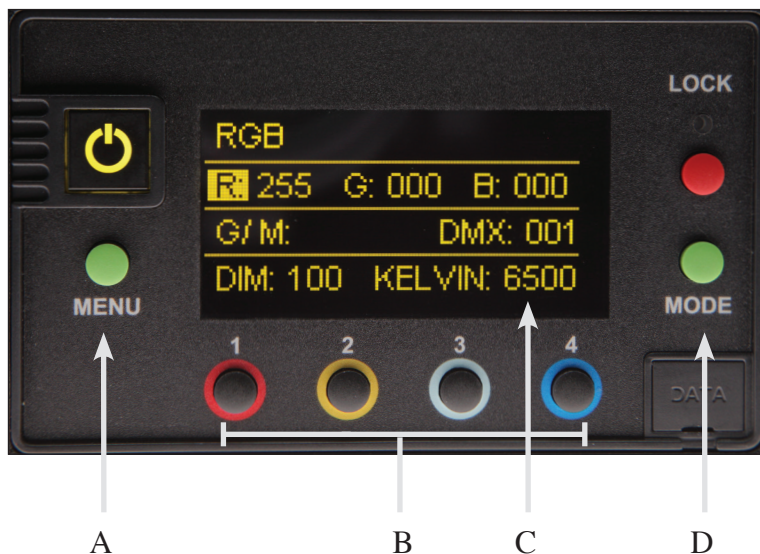

RGB Mode

A) Menu:

Provides access to menu options such as General settings (**RGB Mode**), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, and RGB settings.


C) Display:

Provides access to Dim, Kelvin, G/M, RGB and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

D) Mode:

Press to navigate from Dim to Kelvin, G/M, RGB settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.

Control Panel - FX (Effects)

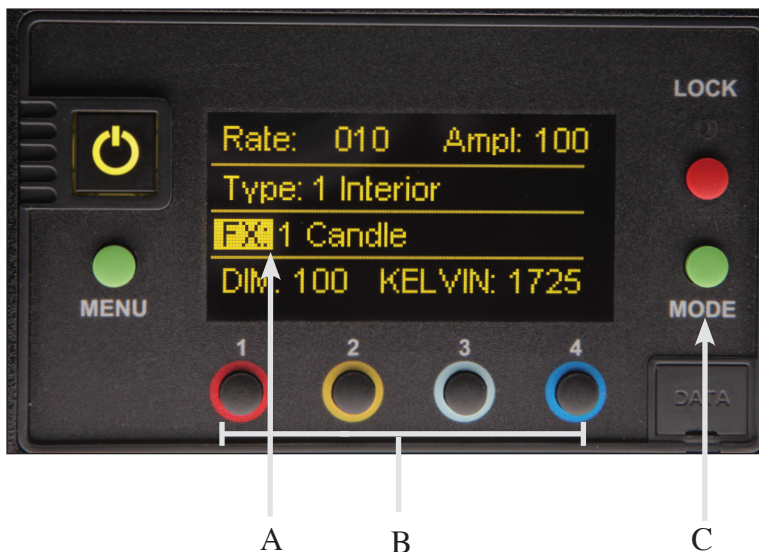

FX (Effects) Mode

FX mode provides access to effects including Candle, Fire, TV, Police, Lightning, Paparazzi, Pulse and Scroll. Candle mode used as an example:

A) FX Option:

Choose the desired FX Mode by rotating the control knob. When on the desired effect, there will be several pre-programmed effects as well as control parameters that can be altered.

B) Preset Buttons:

In FX Mode, **Kelvin** custom settings and any control functions displayed such as **Rate** and **Amplitude (Ampl)** can be saved as a preset. Chosen values can be assigned to any preset button by holding down the desired button for 3 seconds. The Kelvin display will flash once the setting is registered.

To restore presets to default factory settings, choose **Reset** under **General** settings and **Clear Presets**. This method will reset all buttons in all Modes. Shortcut: If only want to clear presets for **Candle** Mode, hold **Lock** button for 3 seconds while Candle mode is displayed.

C) Mode:

Press to navigate from Dim to Kelvin and FX settings.
Shortcut: Long press will bring you back one step.

LED Fixture Specifications



FreeStyle LED

CFX-F41 FreeStyle 41 LED Fixture

Weight: 16 lb (7kg)

Dimensions: 52.5 x 4 x 9" w/ 6" barndoors
(133 x 10 x 23cm w/ 15cm barndoors)

CFX-F31 FreeStyle 31 LED Fixture


Weight: 15 lb (7kg)

Dimensions: 40.5 x 3.5 x 11" w/ 6.5" barndoors
(103 x 9 x 28cm w/ 16.5cm barndoors)

CFX-F21 FreeStyle 21 LED Fixture

Weight: 11.5 lb (5kg)

Dimensions: 26.5 x 3.5 x 13" w/ 6" barndoors
(67 x 9 x 33cm w/ 15cm barndoors)

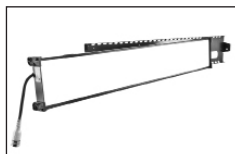

FreeStyle/GT LED

CFX-F41T FreeStyle/GT 41 LED Fixture

Weight: 12.5 lb (6kg)

Dimensions: 50 x 2.5 x 8"
(127 x 6.5 x 20cm)

CFX-F31T FreeStyle/GT 31 LED Fixture

Weight: 11.5 lb (5kg)

Dimensions: 37.5 x 2.5 x 9.5"
(95 x 6.5 x 24cm)

CFX-F21T FreeStyle/GT 21 LED Fixture

Weight: 9 lb (4kg)

Dimensions: 23.5 x 2.5 x 11.5"
(60 x 6.5 x 29cm)



**FreeStyle LED
Panel Only**

PAN-F41 FreeStyle 41 Panel Only

Weight: 10 lb (4.5kg)

Dimensions: 49.5 x 2.5 x 7.5"
(126 x 6.5 x 19cm)

PAN-F31 FreeStyle 31 Panel Only

Weight: 9 lb (4kg)

Dimensions: 37.5 x 2.5 x 9.5"
(95 x 6.5 x 24cm)

PAN-F21 FreeStyle 21 Panel Only

Weight: 7 lb (3kg)

Dimensions: 23.5 x 2.5 x 11.5"
(60 x 6.5 x 29cm)

LED Controller Specifications



**FreeStyle 151 LED
DMX Controller**

LED-151X FreeStyle 151 LED DMX Controller

AC Input Voltage: 100~240VAC 50/60Hz, 150W

Amperage VAC: 1.25A at 120VAC, 0.65A at 230VAC

DC Input Voltage: 18~36VDC, 150W

Amperage VDC: 6.25A at 24VDC

Kelvin Range: 2700K~6500K (White Mode)

Kelvin Range: 2500K~9900K (Color Mode)

Dimming Range: 100%~1%

Weight: 4.5 lb (2kg)

Dimensions: 15 x 4.5 x 3"
(38 x 11 x 8cm)

FCC Part 15 Verification:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

FCC Part 15 Declaration of Conformity:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



KINO FLO, INC
FreeStyle & GT 41, 31 & 21 LED
ID: XRSCRMXTIMO101
IC: 8879A-CRMXT101

For full operation manual, latest Warranty information and Certifications,
see Kino Flo website at www.kinoflo.com.

**Environmental: Disposal of Old Electrical & Electronic Equipment.**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. This product is made of recyclable materials and should be disposed of in accordance with governmental regulations.

Kino Flo, Inc. 2840 N. Hollywood Way, Burbank, CA 91505, USA
Tel: 818 767-6528 website: www.kinoflo.com