

# Imatest INI Reference

## Imatest INI file reference

**Note:** This page is not yet complete

This page is a reference for the **INI files** used to store ImaTest settings, particularly **imatest.ini**, which is the basis of ini files used to control **Imatest IT**. It focuses on INI file settings that are used by several modules and are of interest to users of [IT/EXE](#), [IT/DLL](#), and the [Functional Interface](#). Settings for [Rescharts](#) and [Multicharts](#), which are stored in separate INI files, are omitted.

To keep this document to a reasonable length, the INI references for ImaTest IT modules are stored in their own files:

[Blemish Detect INI Reference](#)

[SFRplus INI Reference](#)

The contents of INI files are of less importance to users of ImaTest Master (and other GUI-based versions) because they are set in the Settings windows (dialog boxes) and when image files are read and cropped, so that users rarely need to view or edit them.

**We *strongly* recommend that ImaTest IT users have a copy of ImaTest Master (or other GUI-based ImaTest edition) to facilitate creation and testing of the INI files used to control IT modules.**

## Table of contents

### INI file structure

<p><b>INI FILES</b> are text files structured so that section titles are enclosed within brackets ( [ ... ] ) and lines have the form name = value, e.g., nwid_save = 2601. Comment lines start with a semicolon (;).</p> <p>Value may be a number, an array of numbers, or a character string. INI files are readable, but the meaning is not always obvious.</p>	<pre>[section] name1 = value1 name2 = value2 ; This is a comment. ... [next_section] ...</pre>
<p><b>EXAMPLE</b></p> <p>dispwelcome = 1 means display the</p>	<pre>[imatest] dispwelcome = 1 exiftool = 2</pre>

<p>Welcome screen when Imatest is started.</p> <p>edfile is location of the image editor, used to display saved screens in interactive modules (Rescharts, etc.)</p>	<pre> expandplt = Min fontsize = 10 readexif = 1 shrink_largef = 1 edfile = C:\Program Files (x86)\IrfanView\i_view32.exe [sfr] filecomb = 0 folder = C:\Imatest\Data\SFR\ save_dir = C:\Imatest\Data\SFR\Results\ ... </pre>
--	---

### Notes

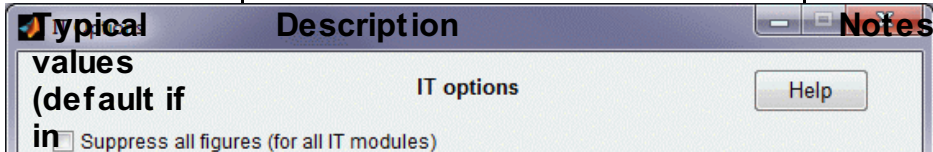
<b>(-IT)</b>	Not used in Imatest IT
<b>(gr)</b>	Affects graphics (figures). May not be of interest for Imatest IT, where graphics is often suppressed.
<b>(index)</b>	Setting is equal to the index of the popup menu. You'll need to open the Settings window to see these: Never used for important IT settings.
<b>(index-1)</b>	Setting is equal to the index of the popup menu – 1 (0 – (index-1)). Keeps backwards compatibility for some settings that were originally 0 (off) or 1 (on), but had options added.

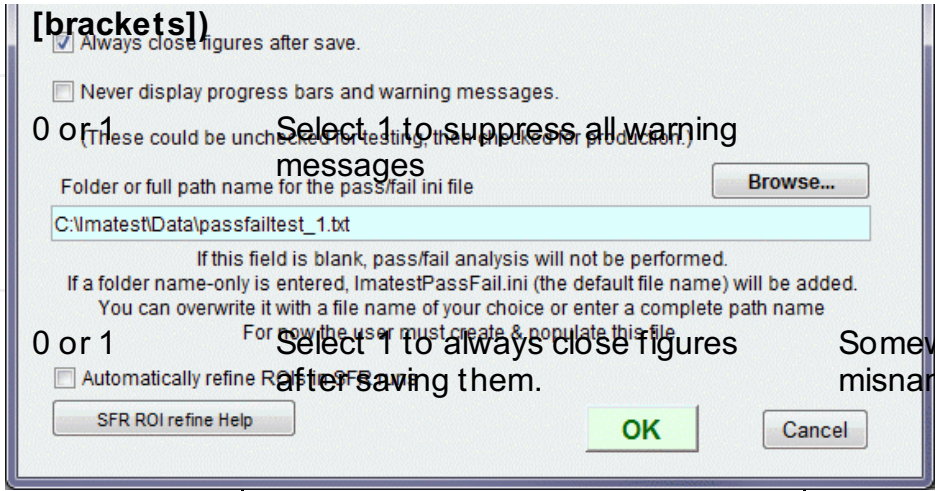
Imatest Master and other GUI-based editions have a set of utilities for editing and manipulating INI files. You can store them in a named file, load them into imatest.ini, import into an ini file (changing only values included in the import file), copy the contents to the clipboard, edit them, or scan them for errors. Click on the button for more detail.

## Sections that affect many modules

### [api] Parameters that affect Imatest IT (DLL and EXE; all modules)

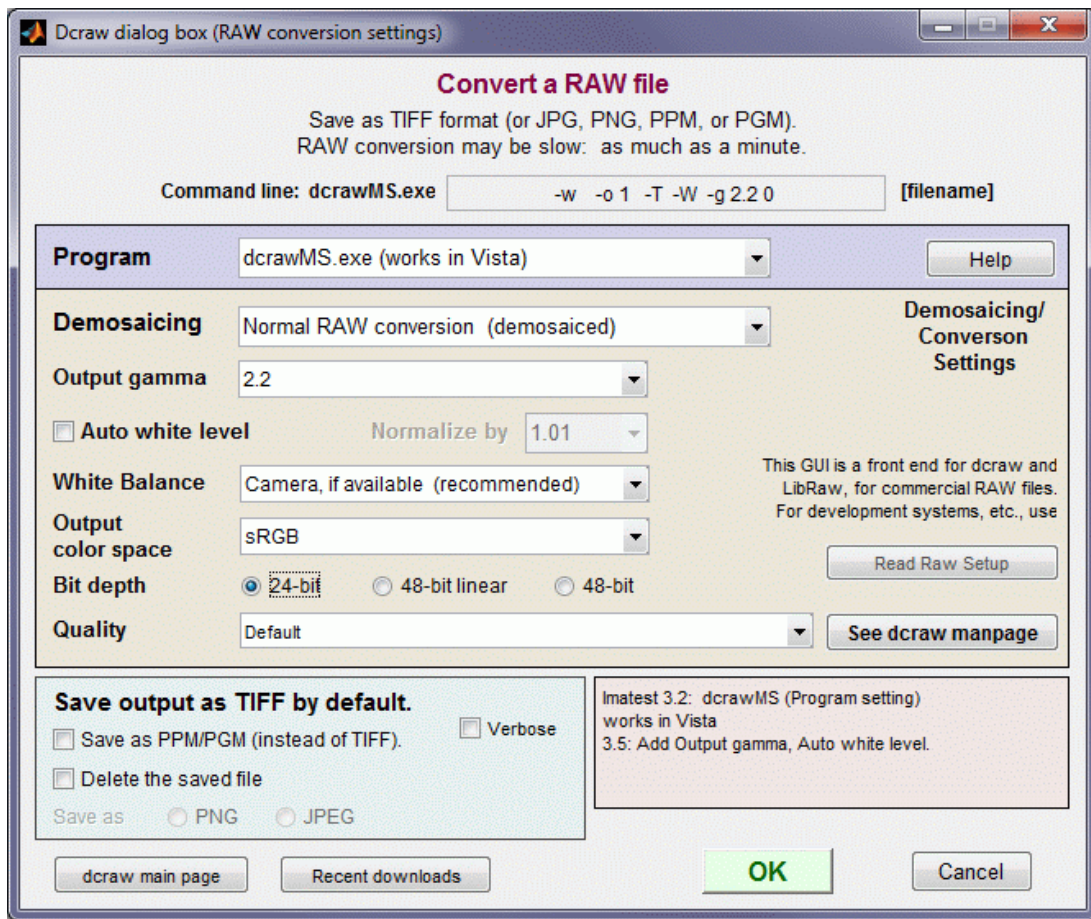
[api] is set in Imatest Master by clicking **Settings, IT options** from the Imatest main window to open the **IT options window**. Note that API is the former name of Imatest IT. Settings affect Imatest IT/EXE and IT/DLL. These settings are described in [http://www.imatest.com/docs/it\\_dll\\_instructions/#ini](http://www.imatest.com/docs/it_dll_instructions/#ini).

Parameter	Settings window	
-----------	-----------------	--

				
nomsg	Never display progress bars... checkbox	0 or 1	Select 1 to suppress all warning messages	
savedel	Always close figures after save checkbox	0 or 1	Select 1 to always close figures after saving them.	Some misnar
sfrrefine	Automatically refine ROIs in SFR... checkbox	0 or 1	Select 1 for automatic region refine for SFR module.	
disable_figs	Suppress all figures checkbox	0 or 1	Select 1 to disable all figures.	
passFail	Pass/fail ini file	full path name to file that contains Pass/Fail criteria	The contents of this file (in ini format) is described in <a href="http://www.imatest.com/docs/it-passfail/">http://www.imatest.com/docs/it-passfail/</a> .	

## [dcraw] Decode commercial RAW files

The dcraw dialog box is a [GUI front-end](#) for the [dcraw](#) program, described in detail [here](#). It is used for converting raw files from commercial cameras with minimal signal processing (i.e., sharpening or noise reduction).



Parameter	Settings window	Typical values (default if in [brackets])	Description	Notes
bayercols	(Pixel color mapping popup menu in the Monochrome image settings window)	1-5 [1]	Mapping between pixel and color in Bayer raw images: 1: unknown; 2-5: Red in R1C1, R2C2, R2C1, R2C2.	
bdep		-4		
brawShift	(Bit shift popup menu in the Monochrome image settings window)	1-6 [1] (index)	Bit shift: 1 for auto; 2-6: 0,2,4,6,8 bits, respectively.	
colorspace		1		

csp		-o 1		
dgamma		2		
delfile		0		
dispg		A		
folder				
gamc				
gamma				
imgpath				
lastfiles				
libraw	Program (dropdown menu)	1-3 [3]	1 = dcraw.exe (Win XP); 2 = <a href="#">Libraw</a> (dcraw_emu.exe or unprocessed_raw.exe); 3 = dcrawMS.exe (recommend; for Win Vista and 7)	
nwb				
ppm				
qual				
rawconv				
rawraw				
rmcn				
save				

wb				
whitelvl				
whitenorm				

[dcraw]

bayercols = 5

bdep = -4

brawShift = 1

colorspace = 1

csps = -o 1

dgamma = 2

delfile = 0

dispg = A

folder = C:\Imatest\Documents\Companies\Lab126\2012-05-18-SFRplus\

gamc =

gamma = 1

imgpath = C:\Imatest\Data\Colorcheck\Misc\RawNoise\

lastfiles = "SFR\_KC211N2214G32054.raw3"

libraw = 3

nwb = 1

ppm = 0

qual = 0

rawconv = 1

rawraw = crw

rncn = 4

save =

wb = -w

whitelvl = 0

whitenorm = 2

## [rdraw] Generalized Read Raw

[rdraw] affects all Imatest modules when raw image files from manufacturer's development systems are read in (either directly or from stored files). The settings GUI is described in [RAW Files](#). Settings are based on the file extension. Since settings for up to 8 file extensions are saved, most variables have 8 entries, indicated by \*8. For these settings the  $n$ th values correspond to one another.

**[rdraw]** Affects all Imatest modules including IT/EXE and IT/DLL when raw files from manufacturer's development systems are read in. Settings are described in . Settings are based on the file extension. Since settings for up to 8 file extensions are saved, many variables have 8 entries, indicated by \*8.

Parameter	Typical values (default if in [brackets])	Description	Notes
bitshift	1-10 (index *8)	Index of bit shift: 1 = auto; 2-10 = 0, -2, -4, -6, -8, 2, 4, 6, 8, respectively. Used as GUI index; <i>not</i> used for actual bit shift calculation.	-IT
bitshift_num	-8 to 8 (-99 for auto) (*8)	Actual number of bits to shift (-99 indicates auto). <b>Used for actual bit shift.</b>	
demoz	1 or 2 (*8)	1 to demosaic the image using Matlab's simple routing. 2 keeps image in Bayer raw format.	
endian	1 or 2 (*8)	Endian (byte order) setting index (does not apply to uint8 (one byte) input). Used as GUI index.	-IT
endian_str	ieee_le or ieee_be (*8)	Endian (byte order) string. <b>Used for opening file to read.</b> See <a href="http://en.wikipedia.org/wiki/Endianness">http://en.wikipedia.org/wiki/Endianness</a>	
<b>extension</b>	raw, rw1, ... (*8)	The file extension (up to 4 characters) that specifies how the file is decoded. Up to eight extensions are stored. The <i>n</i> th value of a parameter (bitshift_num, height, etc.) corresponds to the <i>n</i> th extension. Since RAW is commonly used for all sorts of formats, it is often advisable to change the extension name to something more identifiable.	
height	number (pixels)	Height of image in pixels	
inpix_size	1, 2, or 3 (*8)	Input pixel size: 1 for uint8 (8-bits), 2 for uint16 (16-bits), 3 for uint32	



nexten	1-8	The extension displayed in the GUI.	-IT
nskip	integer [0] (*8)	the number of bytes to skip at the beginning of the file	
nskipend	integer [0] (*8)	the number of bytes to skip at the end of the file	
nunpack	integer	(unused) May be used in the future for unpacking bits.	
outpix_size	1 or 2 (*8)	Output pixel size: 1 for uint8 (8-bits) or 2 for uint16 (16-bits)	
precision	string	String of format $\text{uint}m \Rightarrow \text{uint}n$ where $m$ and $n$ are 8 or 16.	
rawraw (in [dcraw])	raw or other	If set to "raw", file extension "raw" (an obscure Leica format) is processed with dcraw. We recommend setting it to another string, like "CR2".	
rmcn	1-4 (index *8)	Location of the red pixel in Bayer RAW images. 1 = Red in R1C1; 2 = Red in R1C2; 3 = Red in R2C1; 4 = Red in R2C2. These correspond to 'rggb', 'grbg', 'gbrg', and 'bggr' in the <a href="#">Matlab demosaic</a> routine.	
rotateimg	1-8 (index *8)	Rotate converted image: 1-4 = 0°, 90°, 180°, 270° CCW (no mirror); 5-8 = 0°, 90°, 180°, 270° CCW (mirrored).	
savefmt	1-7 (index)	Format and conditions for saving converted RAW file: 1 = None (never save); 2 = PNG (always save); 3 = JPEG (always save); 4 = PNG (convert/test-only); 5 = JPEG (convert/test-only), 6 = TIFF (always save); 7 = TIFF (convert/test-only). 1, 4, 5, 7 can be used where there is no need to save the converted file (in IT, for example).	
testfolder	folder name	Last folder used to test Generalized Read Raw	-IT



transpose	1 [1] (*8)	Transpose rows and columns. In practice, always on [1]	
whitebal	1-3 (index) (*8)	White Balance. 1 = none; 2 = Simple gray world—darken; 2 = Simple gray world—lighten	
whitevl	1,2 (*8)	White level. 1 = No change; 2 = Auto: 99% of saturation.	
width	number (pixels) (*8)	Width of image in pixels	

[rdraw]

```

bitshift = 1      1      1      1      1      1      1      1
bitshift_num = -99    -99    -99    -99    -99    -99    -99    -99
demoz = 2      2      1      2      2      2      1      2
endian = 2      2      2      2      2      2      1      2
endian_str = ieee-le ieee-le ieee-le ieee-le ieee-le ieee-le ieee-be ieee-le
extension = raw4 raw rpp rrr rw8 r800 rw4 rw3
height = 400      808      2448      2464      2448      800      400      808
inpix_size = 1      2      2      2      2      2      1      2
lastfiles = "Dark_15_37_7 hotpixel 584.raw" "Dark_16_4_26 hotpixel 1402.raw"
"Dark_19_16_27.raw" "Dark_19_17_17.raw" "Dark_19_18_16.raw" "Dark_19_19_5.raw"
"Dark_19_19_48.raw" "Dark_19_20_37.raw"
nexten = 4
nskip = 0      0      0      0      0      0      0      0
nskipend = 0      0      0      0      0      0      0      0
nunpack = 1      1      1      1      1      1      1      1
outpix_size = 1      2      2      2      2      2      1      2
precision = uint8=>uint8 uint16=>uint16 uint16=>uint16 uint16=>uint16 uint16=>uint16
uint16=>uint16 uint8=>uint8 uint16=>uint16
rawraw = raw
rmcn = 1      3      4      2      4      3      4      2
rotateimg = 1      1      1      1      1      1      1      1
savefmt = 4
testfolder = C:\matest\Documents\Companies\Lab126\2012-07-12\
transpose = 1      1      1      1      1      1      1      1
whitebal = 1      1      1      1      1      1      1      1
whitevl = 1      1      1      1      1      1      1      1
width = 400      1296      3264      3280      3264      1280      400      1296

```

# Variables used in many modules

## Secondary readout variables

Used in sharpness modules: [sfr], [sfrplus] (imatest.ini and rescharts.ini), [logf], [logfc], [random], [star], [wedge] (rescharts.ini-only).

Select secondary readout(s) (Primary is MTF50) Help

1 ☐ MTF 30 (Spatial frequency f where  $MTF(f) = 30\% * MTF(0)$ )  
☐ MTF 30 P (Spatial frequency f where  $MTF(f) = 30\% * Peak\ MTF$ )  
☒ MTF @ 0.25 C/P  
☐ MTF Area Normalized to peak MTF (recommended)

2 ☐ MTF 20 (Spatial frequency f where  $MTF(f) = 20\% * MTF(0)$ )  
☒ MTF 20 P (Spatial frequency f where  $MTF(f) = 20\% * Peak\ MTF$ )  
☐ MTF @ 0.2 C/P  
☐ MTF Area Normalized to peak MTF (recommended)  
☐ None

3 (for lens-style MTF plot only: need same units as 1,2)  
☐ MTF 20 (Spatial frequency f where  $MTF(f) = 20\% * MTF(0)$ )  
☐ MTF 20 P (Spatial frequency f where  $MTF(f) = 20\% * Peak\ MTF$ )  
☐ MTF @ 0.2 C/P  
☒ None

☐ Emphasize (display boldface, large) OK Cancel

Parameter	Typical values (default if in [brackets])	Description	Notes
areanorm	[2 2]	Normalization for MTF area plots	Type of MTF Area plot for first and second secondary readout. 1: unnormalized, 2: normalized (generally preferred; similar to MTF50 when there is no frequency domain overshoot).
rdtype	MTF MTF__P MTF@ MTF Area (none)	1st secondary readout name	

rdtype2	same as above	2nd secondary readout name	
rdtype3	same as above; often (none)	3rd secondary readout name	Used only for lens-style MTF plots
rdpct	10-80 [30]	1st readout percentage	Percentage nn for MTFnn or MTFnnP Same as above Same as above  Example: for rdtype = MTF__P, rdpct = 20, rdunit = 4, Secondary readout 1 would be MTF20 (C/P)
rdpct2	"	2nd readout percentage	
rdpct3	"	3rd readout percentage	
rdnum	numeric	Number for MTF @ 1st readout	The number depends on the units in rdunit (below).  Example: for rdtype = MTF @, rdnum = .25, rdunit = C/P, Secondary readout would be MTF @ .25 C/P
rdnum2	"	Number for MTF @ 2nd readout	
rdnum3	"	Number for MTF @ 3rd readout	
rdunit	1 for C/P 2 for LP/mm 3 for LP/in 4 for LW/PH (See notes.)	Index for units: 1st readout	Values corresponding to rdunit: {'C/P'; 'LP/mm'; 'LP/in'; 'LW/PH'; 'LP/PH'; 'C/mrad'; 'C/deg'; 'C/Obj mm'; 'C/Obj in'}
rdunit2	Save as above	" 2nd readout	
rdunit3	Save as	" 3rd	

above

readout

## Miscellaneous variables

These are set during image file read, cropping, or in the monochrome file or save results dialog boxes.

Parameter	Settings window	Typical values [default]	Description	Notes
bayeraw	— (Set by several buttons in the Monochrome image settings window)	0-5 [0]	If > 0, monochrome files contains Bayer RAW data. 1-4, indicates primary color to analyze (R, Gr, B, Gb). 5 indicates Demosaic.	
closefigs	Set by the Close figures after save checkbox in the Save window.	0 or 1 [0]	1 recommended for IT (closes windows after save).	
figsave	Set in Save figures as PNG or FIG dropdown menu in Save window	1 or 2 [1 recommended]	Type of figure to save (PNG or FIG). FIG files not recommended because they require <i>much</i> more storage.	(gr)
filecomb	Set when multiple files are selected for analysis	0 or 1 [0]	0: Read and analyze files as a batch, 1: Combine files (signal-average)	(-IT)
folder	Set during image file read	(Path name)	Folder for last input image	(-IT)
nchan	Channel popup menu	1-4	Channel to analyze: 1-4: R, G, B, Y (Luminance)	
nht_save	Set during image	2448 ...	Height in pixels of	

	read		recent image(s). There may be several.	
nwid_save	Set during image read	3264 ...	Width in pixels of most recent image(s). There may be several.	
plot_image	Plot checkboxes in Settings window	1 0 0 0 0 0		
roi	Set during region selection (primarily in the fine adjust window)	1 1 3264 2448 (typical)	Region of interest (crop) in pixels. [x1 y1 x2 y2] Groups of 4, each group corresponding to a number in nht_save and nwid_save.	
save_answer	Save window—main answer (unused)	Yes, No	Saved setting not used.	(-IT)
save_dir	Set in Save window	(Folder name)	Last folder used to save results	(-IT)
saveCSV	Save window	0 or 1 [-99 = ignore]	Save CSV results. Overrides save_file_list.	
saveJSON	Save window	0 or 1 [-99 = ignore]	Save JSON results. Overrides save_file_list.	
saveXML	Save window	0 or 1 [-99 = ignore]	Save XML results. Overrides save_file_list.	
save_file_list	Save window	[1 1 1 0 0 0 0 0 0 0]	List of results to save if element is set to 1: Details differ in different modules.	
speedup	Speedup	0	if set to 1, skip several	

	checkbox		calculations to speed up operation. Details differ in different modules.	
--	----------	--	--	--